Valentina

CONCRETE WALL MOUNTED BATHROOM SINK

CHECK GOODS THOROUGHLY BEFORE INSTALLATION

Installation of received goods that are damaged, warped or faulty will void warranty. Ensure all items meet your plumbing requirements.


PLEASE LEAVE THIS GUIDE WITH THE OWNER


RR078

Vanilla **RR078V**
Sage **RR078SG**

- Fluted design
- Concrete with food-grade nano sealant
- No overflow
- Requires sink drain 1-1/4 (not included)
- Extra heavy duty mounting brackets and bolts included



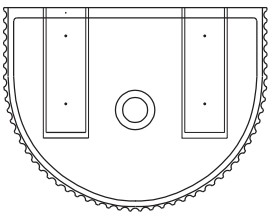

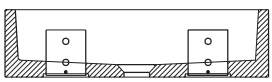

Installation Instructions

PLEASE READ CAREFULLY BEFORE INSTALLATION


The fixings supplied are suitable for solid masonry walls only. Dry wall or stud walls may require specialist fixings (not supplied).

CAUTION: Care should be taken when drilling walls and floors to avoid any sunken electrical wires or water pipes.

FOR OTHER WALL CONSTRUCTION SYSTEMS USE SUITABLE FIXING METHOD.


Sink Installation with Fixing Kit

1. Mark out the installation height and the centre line of the sink on the finished wall at the recommended height as shown and prepare water inlet and outlet connections.

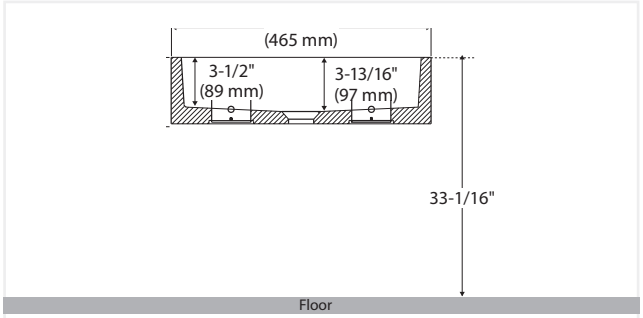


2. Fit the two mounting brackets to the sink with the provided M5 x 10mm screws and flat washers and tighten. Please note the brackets are left and right specific.


Caution: Do not over tighten the bracket to sink screws as this may damage the concrete sink.

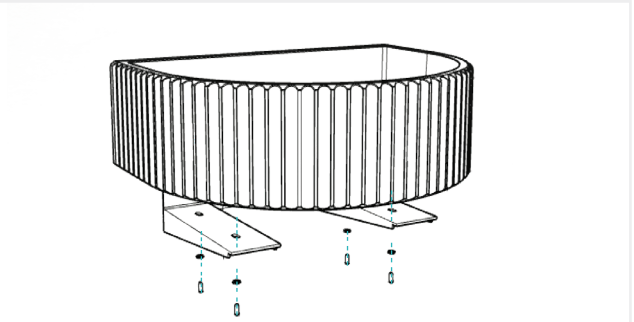

3. Measure and record the mounting hole locations of the sink mounting brackets. Transfer the mounting hole locations to the wall according to the centre line and adjust to be flat and centred. Drill the four marked holes in masonry wall using a masonry drill bit, to the required depth. Push the supplied wall plug into each hole.

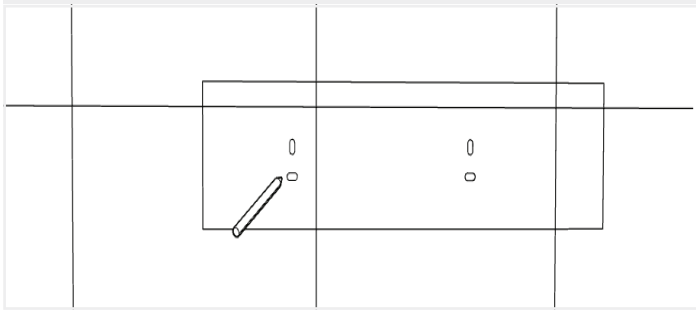


4. Remove the mounting brackets from the sink.

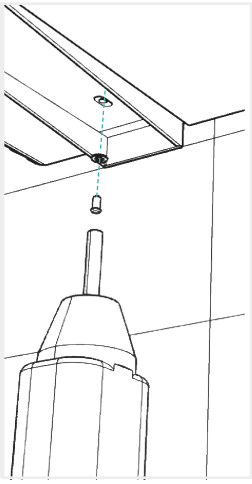


5. Place the mounting brackets in position against the wall, locating the wall plug holes through the holes in the sink brackets. Screw a mounting screw into each wall plug to secure the mounting brackets to the wall.

Caution: Do not over tighten the anchor bolt nuts.

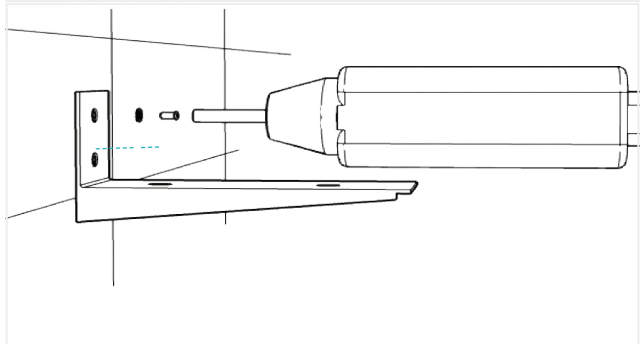

6. Screw the sink to the mounting brackets with the provided M5 x 10mm screws and flat washers and tighten.

Caution: Do not over tighten the bracket to sink screws as this may damage the concrete sink.

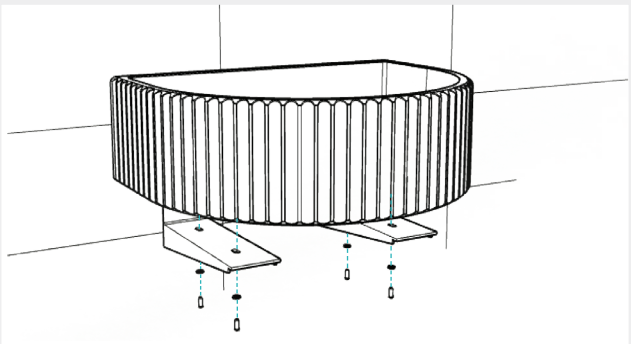

7. Install the faucet and the sink drain according to the installation instructions for the fittings. Connect the water supply pipe and the drainage pipe.

Note: Connect the hot water and cold water pipes according to the faucet markings.

Warranties

Residential Warranty Periods

Applies to domestic uses and applications of Ironhart® products, such as private dwellings and senior living communities.

Product Component	Residential
Concrete	2 years replacement parts, 1 year labor
Accessories & Spare Parts	1 year replacement parts or product

Ironhart Pty Ltd reserves the right to make changes in product characteristics, packaging or availability at any time without notice. Please visit ironhartco.com for the latest information.

Warranty Conditions

- All maintenance and adjustments to the product after the installation have been carried out by a licensed tradesperson.
- All care and cleaning instructions have been adhered to as prescribed.
- Proof of purchase is required for warranty claims.

Warranty Limitations

To the extent permitted under the relevant legislation, Ironhart's liability is limited to:

- The cost of replacing the goods, or
- The cost of obtaining equivalent goods, or
- The cost of having the goods repaired.
- Ironhart is not responsible for any lack of operation or performance of goods (or any loss or damage) where goods are used or adapted for use with other goods not supplied by Ironhart.
- It is the responsibility of the customer and installer before installation to ensure that all components are correct and free of obvious visible faults.
- Ironhart is not responsible for the labor and rectification costs incurred in the above circumstance.

Conditions for On-Site Warranty Service Calls

Ironhart will charge a service fee for each visit to an installation by its technician where it is determined that the fault is due to poorly executed or unlicensed installation work or where the product is not a genuine Ironhart product or where the product is outside the warranty period. This may be paid in advance by credit card over the phone to a Ironhart technician attending the site and will be refunded if the Ironhart product is found to be at fault.

P 980 460 3474 **E** info@ironhartco.com

All installations should be carried out by a qualified tradesman in accordance with local building codes and standards. All measurements are in inches and millimetres and are subject to change without notice. For ceramic products, please allow +/- 13/32" (10mm) tolerance for manufacturing variance. Please refer to www.ironhartco.com for the latest product specification.

THIS PAGE IS INTENTIONALLY LEFT BLANK

P 980 460 3474 **E** info@ironhartco.com

All installations should be carried out by a qualified tradesman in accordance with local building codes and standards. All measurements are in inches and millimetres and are subject to change without notice. For ceramic products, please allow +/- 13/32" (10mm) tolerance for manufacturing variance. Please refer to www.ironhartco.com for the latest product specification.