Aluca

Freestanding Acrylic Bathtub With Legs

FF88-59 | FF88-67

- UV stabilized premium sanitary-grade acrylic with Lucite MMA
- Built-in overflow
- Requires 1 1/2" bathtub drain included
- Built-in steel support frame
- Requires adjustable self-supporting decorative legs (FF88-LEGS) available in five finishes (not included)

CHECK GOODS THOROUGHLY BEFORE INSTALLATION

Installation of received goods that are damaged, warped or faulty will void warranty. Ensure all items meet your plumbing requirements.

PLEASE LEAVE THIS GUIDE WITH THE OWNER

Installation Instructions


PLEASE READ CAREFULLY BEFORE INSTALLATION

Floor preparation may be required for off-centre waste positions. Please discuss with your builder/plumber before tiling and waterproofing your bathtubroom.


Bathtub & Legs Installation

Required Tools: Adjustable Shifters, Spirit Level


1. After opening box, check all packed parts carefully and report any missing parts, finish defects or damage immediately to your retailer or place of purchase. Do not proceed with installation if there are issues as this will void the warranty.
2. Remove the bathtubtub from the box and place the bathtub on a flat level surface.
3. Measure the height of the bathtub from floor level to the top edge of the bathtub. The recommended bathtub height is 23.63 inches (600mm).

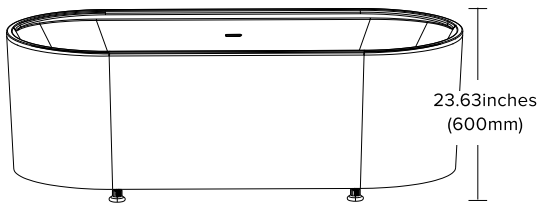


4. With two people lift the bathtub and invert the bathtubtub and place it onto a soft, flat surface. It is important to use a soft material to protect the top lip of the bathtub.
5. Unscrew the 4 rubber bathtub support feet from the inner mounting points on bathtub support frame. Remove one nut and one washer from both of the support feet and colored leg mounting points. Ensure you leave a single nut and a single washer on each mounting point. Repeat on each corner of the bathtub.

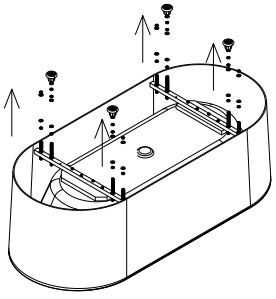


6. Place a colored bathtub leg over both the inner and outer threaded mounting points and secure each leg a nut and washer on both the inner and outer mounting points. Repeat for each bathtub leg (4). Adjust the lower nuts on the mounting points to allow a minimum 1/8- 1/16" gap between the leg bracket and the lower edge of the bathtub.

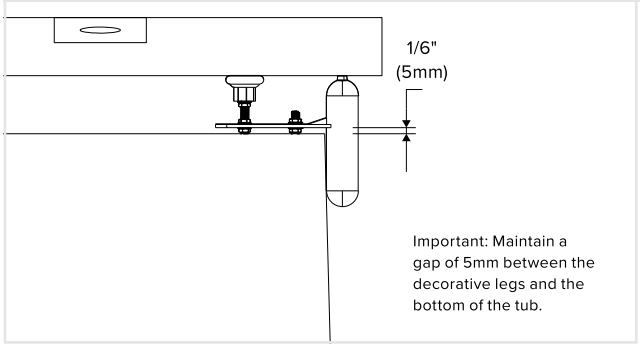

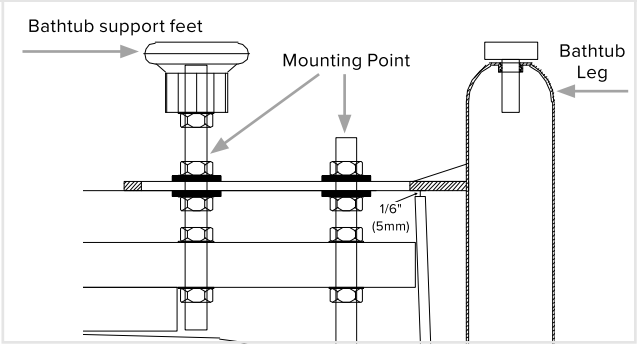


7. Reinstall the rubber bathtub support feet to the inner threaded mounting points. Repeat on each corner of the bathtub (4).

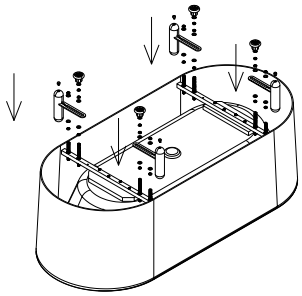

8. Use a spirit level to ensure the rubber support feet are level and are positioned approx 1/12- 1/16 " (2-3mm) above the colored bathtub legs.

9. Install the bathtub waste and any required plumbing to the bathtub.

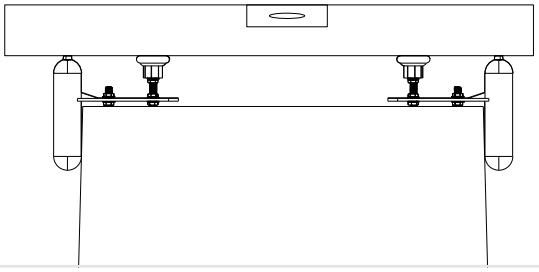

10. Using two people lifting the bathtub, invert the bathtub and place into position.

11. Check the bathtub is level and is at the correct height. Adjust the rubber bathtub support feet by screwing them in out until the bathtub is level and stable.

12. Clean the bathtub and colored legs

Warranties

Residential Warranty Periods

Applies to domestic uses and applications of Ironhart® products, such as private dwellings and senior living villages.

BATHTUBS	
Range / Component	**Residential**
Acrylic Gloss White (Shell Only)	10 years replacement product, 1 year labor
Accessories & Spare Parts	1 year replacement parts or product
Finishes - Chrome	10 replacement parts or product, 1 year labor
Finishes - Electroplated	5 years replacement parts or product, 1 year labor
Finishes - PVD	10 years replacement parts or product, 1 year labor

Warranty Conditions

- All goods of substandard quality manufacture (excluding imperfections permitted within local building codes and standards) will be credited or replaced by Ironhart when advised within the warranty period, subject to prior inspection and agreement.
- All maintenance and adjustments to the product after the installation have been carried out by a licensed tradesperson.
- All care and cleaning instructions have been adhered to as prescribed.
- Proof of purchase is required for warranty claims.

Conditions for On-Site Warranty Service Calls

Ironhart will charge a service fee for each visit to an installation by its technician where it is determined that the fault is due to poorly executed or unlicensed installation work or where the product is not a genuine Ironhart product or where the product is outside the warranty period. This may be paid in advance by credit card over the phone to a Ironhart technician attending the site and will be refunded if the Ironhart product is found to be at fault.

For warranty support, please visit our website www.ironhartco.com

P 980 460 3474 **E** info@ironhartco.com

All installations should be carried out by a qualified tradesman in accordance with local building codes and standards. All measurements are in inches and millimetres and are subject to change without notice. For ceramic products, please allow +/- 13/32" (10mm) tolerance for manufacturing variance. Please refer to www.ironhartco.com for the latest product specification.

THIS PAGE IS INTENTIONALLY LEFT BLANK